



PROFECT® HP

Hydrogen Peroxide Disinfectant



Use Profect HP daily as part of a simple and effective cleaning and disinfection program for your entire facility on hard, non-porous surfaces. Featuring patented hydrogen peroxide technology, Profect HP kills bacteria and viruses in 60 seconds and kills *Candida auris*² in five minutes. One minute contact times ensure efficacy and compliance for your most critical disinfection needs^{2,3}. Ideal for daily use on high-touch surfaces², Profect HP is available in a convenient ready-to-use formula.

EPA Registration Number: 5741-33

PROFECT® HP

FEATURES

- Kills bacteria, enveloped⁷ and non-enveloped⁸ viruses, and fungi
- Features patented hydrogen peroxide technology
- Ready-to-use formula ensures proper ppm required for disinfection
- Profect HP is a one-step healthcare disinfectant that delivers effective performance against *Candida auris*³

BENEFITS

- One minute contact time ensures efficacy and compliance
- Offers convenience and broad spectrum kill in one product
- Meets the surface disinfection recommendations of OSHA bloodborne pathogen standard
- Disinfects high touch surfaces² in 1 minute

²On hard, non-porous surfaces

³When the use-directions for disinfection are followed


⁷Human Coronavirus, Influenza B, SARS-CoV-2

⁸Feline Calicivirus, Rhinovirus type 37, Rotavirus

SPECIFICATION DATA

Dilution	Ready-to-use
pH	1.8 – 2.2
Color	Colorless
Fragrance	Mild
Specific Gravity @ 24°C/75°F	1.014
Flash Point	> 94°C/201°F ASTM D56
Stability: Shelf @ 24°C/75°F	2 years minimum
Stability: Freeze/Thaw	Will withstand 3 cycles
EPA Registration Number	5741-33

ORDERING INFORMATION

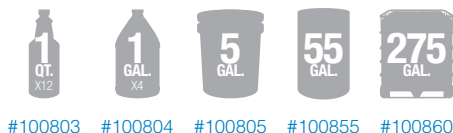

EFFICACY DATA

FOR USE AS A ONE-STEP DISINFECTANT, DEODORIZER, AND CLEANER ON HARD, INANIMATE NONPOROUS ENVIRONMENTAL SURFACES

When used as directed, this product is effective against *Pseudomonas aeruginosa*, *Staphylococcus aureus*, *Salmonella enterica*, *Acinetobacter baumannii*, Carbapenem Resistant *Escherichia coli*, *Escherichia coli* O157:H7, Extended-Spectrum beta-lactamase (ESBL) producing *Escherichia coli*, Metallo-beta lactamase (MBL) producing *Pseudomonas aeruginosa*, Methicillin Resistant *Staphylococcus aureus* - MRSA, Multi-drug Resistant (MDR) *Enterococcus faecium*, Multi-drug Resistant (MDR) *Klebsiella pneumoniae*, New Delhi metallo-beta-lactamase 1 (NDM-1) producing *Escherichia coli*. Treated surfaces must remain visibly wet for 1 minute.

TUBERCULOCIDAL ACTIVITY

Profect HP exhibits disinfectant efficacy against *Mycobacterium bovis* (TB) when the treated surface is allowed to remain wet for 3 minutes at 68°F (20°C). Visibly soiled areas must be pre-cleaned prior to treatment.

FUNGICIDAL ACTIVITY

Profect HP is an effective disinfectant against the pathogenic fungus, *Trichophyton interdigitale* (Athlete's Foot Fungus) (a cause of ringworm) and *Candida albicans* on visibly clean, hard, non-porous surfaces (such as those found in locker rooms, dressing rooms, shower and bath areas, and exercise areas) for a 1-minute contact time at room temperature. Profect HP is effective against *Candida auris* at a contact time of 5-minutes. Follow the special label instructions for cleaning prior to disinfection against *Candida auris*.

*VIRUCIDAL ACTIVITY ON HARD, INANIMATE NONPOROUS ENVIRONMENTAL SURFACES

When used as directed, Profect HP is effective against Avian Influenza A (H5N1) Virus, Herpes Simplex Virus Type 1, Herpes Simplex Virus Type 2, Human Coronavirus, Human Hepatitis B Virus (HBV), Human Hepatitis C Virus (HCV), Human Immunodeficiency Virus type 1 (AIDS Virus), Human Rotavirus, 2009 H1N1 Influenza A Virus, Influenza B Virus, Norovirus (Feline Calicivirus), Respiratory syncytial virus, Rhinovirus type 37, Vaccinia virus, and Severe Acute Respiratory Syndrome-Related Coronavirus 2 (SARS-CoV-2). Treated surfaces must remain visibly wet for 1 minute unless otherwise noted.

SOFT SURFACE NON-FOOD CONTACT SANITIZER

For spot treatment of cotton or polyester/cotton blend fabrics. When used as directed, Profect HP is effective against *Klebsiella aerogenes*, *Staphylococcus aureus*, *Acinetobacter baumannii*, Vancomycin Resistant *Enterococcus faecalis* - VRE. Treated surfaces must remain visibly wet for 1 minute.

ADDITIONAL RESOURCES

Scan the QR code to access this product's safety information and documentation.



SAFETY: For institutional and industrial use only. Be sure to read all directions, precautionary and first aid statements on product labels before using this or any other Spartan product. If questions remain, consult your employer or a physician. Safety Data Sheets for all Spartan products are available from your authorized Spartan distributor and at www.spartanchemical.com. Workplace labels are available in English, Spanish, and French.

GUARANTEE: Spartan's modern manufacturing and laboratory control ensures uniform quality. If dissatisfied with performance of product, any unused portion may be returned for credit within 12 months of the date of manufacture.